

JupiterBike

ROGUE | **ELECTRIC
BICYCLE**

RIDING GUIDE

IMPORTANT, RETAIN FOR FUTURE
REFERENCE: READ CAREFULLY

www.jupiterbike.com

TABLE OF CONTENTS

ROGUE Specifications	2
Included in Packaging	3
Assembly Typo (Handlebar installation, Fender installation, Front wheel installation, Headlight installation, Install the Basket, Install the pedal)	4
Display Instruction	7
Error Code	9
Charging	10
Charging and Battery Safety Tips	11
Usage of the ROGUE	12
Safety Information	13
Care & Maintenance	14

ROGUE SPECIFICATIONS

- Max Supported Weight: 330 lbs
- Min. Supported Weight: 100 lbs
- Max Speed: 20 mph
- Max Range: 50 miles(Assist driver mode)
- Motor Power: 750W
- Battery Voltage: 48V DC Lithium Battery
- Battery Capacity:15.6Ah
- Shifter Throttle: Yes
- Power Requirement: JY-546200 INPUT: 100-240V-50/60Hz 2.5A OUTPUT: 54.6V 2.0A109.2W
- Front Fork: Rigid Steel Fork
- Tire Size: 20” Front & Rear
- Brake Type: Hydraulic Brake



The following instructions are applicable to the basic user manual. Please pay special attention to Warnings or Notes as published in this manual. For your cycling safety, please read this manual carefully before using your ROGUE electric bicycle to make sure you can ride comfortably and correctly.

INCLUDED IN PACKAGING

01 Bike

02 Fender

03 Pedal

04 Front Wheel

05 Headlight

 
 
 
 
06 Basket

07 Charger Cable



08 Charger

09 Quick dismantling rod

10 Tools

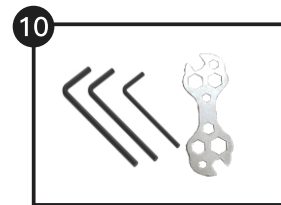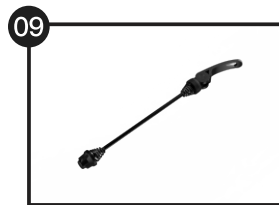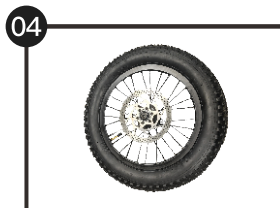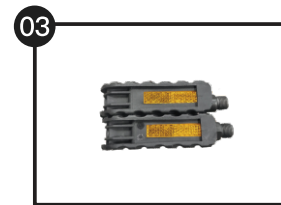

ASSFMBLY TYPO

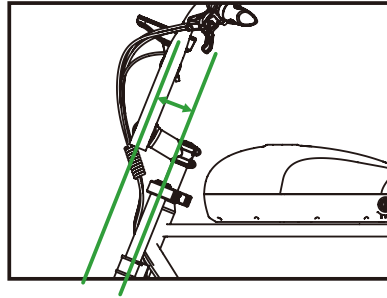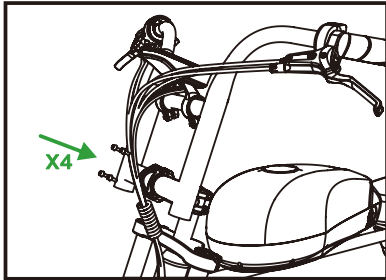  


• Handlebar installation


Place the handlebar into the stem bracket

Align handlebars to sitting position
Tighten the provided bolts keeping note of fork alignment while doing so.

• Fender installation

  
The front fender is held in place by its center bolt.

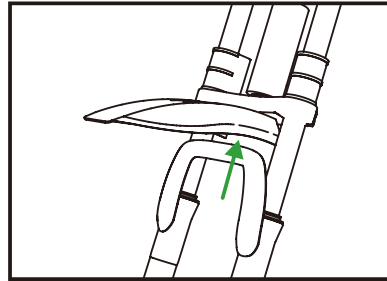

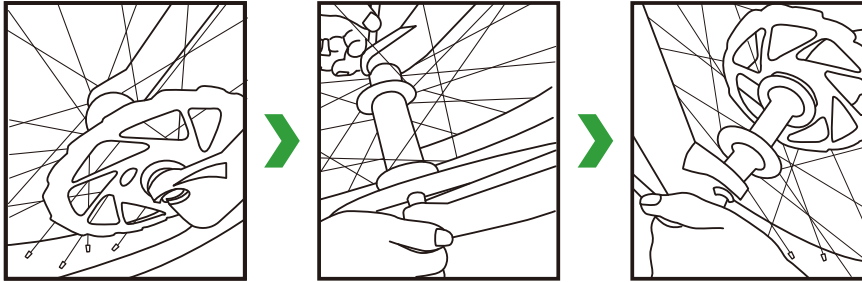

· Front Wheel Installation


Place the front wheel into the fork.
Keep the quick release lever on the side opposite the rotor/caliper.
Tighten firmly, close latch to finish tightening.


 **Screw on and tightened**

  · Headlight Installation

Provided padding should be installed on the headlight brackets.

Use proper sizing notch on bracket and close by tightening bolt/nut in place.

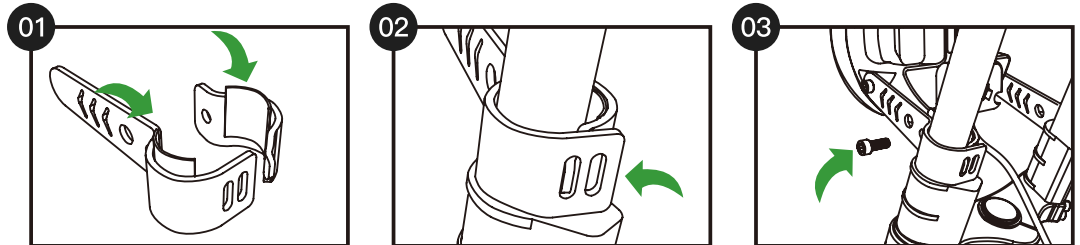

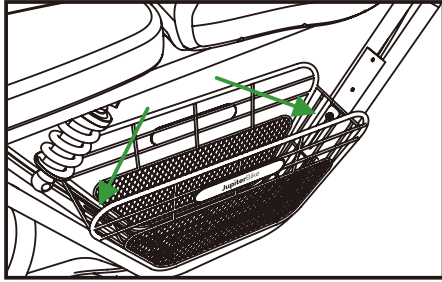







• **Basket Installation**

Put the basket on the middle part
Screw on and tightened

• **Install the Pedals**

Pedals are labeled R and L for their placement. Right side Left side.

      Note the Left pedal is reverse thread for installation, counter-clockwise to tighten.

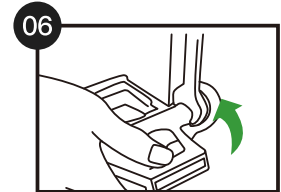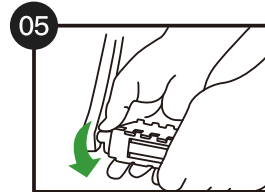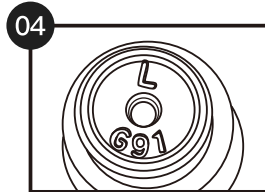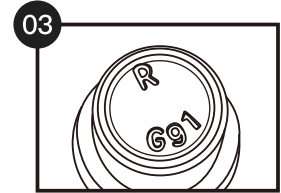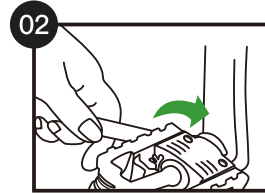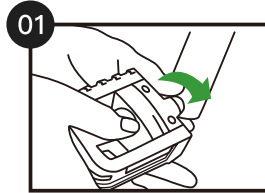

· Display Instruction



Lock Motor Indicator



Cruise Control



Walk Mode



Brake indicator



Error Indicator



Battery Indicator



Fault Indicator



Headlight Indicator



 
Throttle



Turning State



Gear

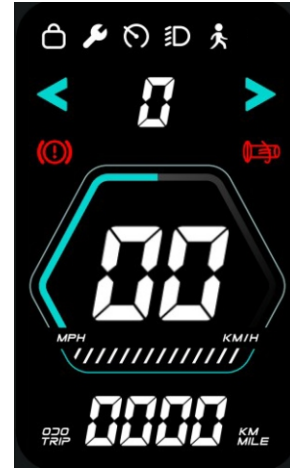

· Button Operation



Shimano 7 Speed & Accelerator



Display home button



Headlight & horn button

· Key Operation

Function Name	Operation Method
Power on/off	Long press the button for more than 2S
Trip and ODO switching	In the power-on state, press the button once
Turn on/off headlights	In the power-on state, press the button twice quickly
Toggle kilometer units	In the power-on state, press the button thrice quickly
Gyroscope sensor ON/OFF	In the power-on state, press button quartic quickly
Release/Set speed limit (only for final gear)	Hold the brake handle tightly, press and hold the button to turn on the machine, release the brake handle after turning the throttle 5 times, and the speed limit is set/released successfully with a beep
Motor Unlock	Hold the brake handle tightly, press and hold the button to turn on the power, turn the throttle twice and then release the brake handle, the motor will be unlocked with a beep, only for motor was locked
Up shift gear	Press the“▲”key or press the display key change gear
Down shift gear	Press the“▼”key or press the display key change gear

Error Code

No.	Error code	Fault point
E1	Motor hall error	check Motor and motor cable
E2	Controller MOS Over current protection error	check controller
E3	Brake signal error	check brake cabel
E4	Throttle signal error	check throttle cabel
E5	Low voltage protection error	check controller cable if is it short and battery error
E6	Communication failure	check main-usb cable between the display and controller
E7	Overvoltage protection error	check controller and battery
E8	Controller MCU error	check controller
E9	Stall protection error	check Motor and motor cable

CHARGING

- The charging port is located under the frame
- Plug the charging cable into the charging port.
(Make sure the connection is dry)
- The indicator LED of the charging adapter turns red when charging and turns green when the battery is full. Please stop charging when it is full to prevent battery life from deteriorating. Please use the batteries, chargers and cables supplied by the original manufacturer to prevent the battery from being overcharged.
- When finished charging, close the charging flap to prevent any damage to the port.

WARNING: UN-PLUG BEFORE TURNING ON IGNITION.



Note: Please be sure to keep the port covered and free of dirt and water.

CHARGING & BATTERY SAFETY TIPS

WARNING: The ROGUE is not waterproof, and therefore should always be kept away from any source of water—NEVER allow the charging block, cables or cable ends to touch water. Do not handle with wet hands as it may cause electric shock. If any failure occurs during charging, unplug immediately. Do not yank or pull on the plug to the ROGUE or pull from an electrical socket in an abrasive manner.

- Check battery level before the first use.
- It is recommended that the battery be recharged after each use.
- To maximize the battery life, please charge once per month or after at least 2 days of operation.
- Recharge the battery pack at least once per month as all batteries of every type will slowly discharge energy when left idle for extended periods of time.

Try to keep the battery from being exposed to excessive heat or very hot temperatures.

- Please use the batteries, chargers and cables supplied by the original manufacturer to prevent the battery from being overcharged.
- Do not allow the charger or cable to contact sharp or hot items.
- Perform a visual inspection of the charger and charging cables regularly.
- If the charging cable has obvious damage – do not use the charger to avoid injury or electrical damage.
- Please do not repair the battery, the charger, or the cable independently.
- Please ensure that the charger and charging cables are connected correctly and are free of dust, dirt, and water.
- Prolonged exposure to UV rays, rain and elements may damage the enclosure materials, store indoors when not in use.
- The charging range and use range are 0°–40°C.
- Please do not disassemble parts by yourself.

Please contact us if you experience any problems or issues.

USAGE OF THE ROGUE

- The ROGUE is a one-person mobility product – anyone who is under 12 years old needs to be assisted when riding.
- The ROGUE is only for daily recreational use and is not designed for extreme sports.
- Check that the parts of the bicycle are installed correctly and not damaged.
- Check that folding mechanism is locked.
- Check the battery – is the battery charged?
- Check the brakes – do they function for both front and rear wheels?
- Check the tire – make sure there are no punctures or bubbles.
- Ride with caution and always wear a helmet.
- Make sure to follow maintenance protocols. Lack of proper maintenance may void warranty.
- **WARNING** – Risk of Fire – No User Serviceable Parts.
- **AVERTISSEMENT** – Risque d’incendie – Aucune des pièces ne peut être réparée par l’utilisateur



Handbrakes

Squeeze each brake slowly to avoid stopping abruptly and losing control.

SAFETY INFORMATION

Your electric bicycle can provide many years of service and fun — if you are safe and responsible when riding.

Always Wear a Helmet

Helmets significantly reduce the number and severity of head injuries. Always wear a helmet that complies with your local and state laws when riding any electric bicycle for that matter. Check with your local police department for requirements in your community. DO NOT wear loose fitting clothing as they can get tangled in the moving parts of the electric bicycle. Wear close-toed shoes. Always wear a helmet and appropriate apparel when riding. If you are unsure, check with your local state laws concerning other protective gear that may be required when riding the electric bicycle.

Know Your ROGUE ELECTRIC bicycle

Your new ROGUE bicycle incorporates many features and functions that you may not be familiar with. Read this manual thoroughly to understand how its features can enhance your riding experience.

Ride Defensively!

One of the most frequent cycling accidents occurs when the driver of a parked car opens his door into a rider's path. Another common occurrence is when a car or another cyclist moves suddenly into your path. Always be aware of vehicles around you. Do not assume that surrounding drivers or pedestrians see you. Be prepared to take evasive action or stop suddenly.

Make Sure You Are Visible to Others!

Make yourself more visible by wearing bright reflective clothing. Keep your reflectors clean and properly aligned. Use your headlight in reduced lighting conditions. Signal your intentions so that drivers and other cyclists can anticipate your actions. Use your bell when needed to make your presence known.

Ride Within Your Limits!

Take it slow until you are familiar with your local riding conditions. Be especially careful in wet conditions as traction can be greatly reduced and brakes become less effective. Never ride faster than conditions warrant or beyond your riding abilities. Remember that alcohol, drugs, fatigue, and distractions can significantly reduce your ability to make good judgments and ride safely.

Do not use your mobile phone when riding - this can cause you to be distracted - stay alert!

Make Sure Your bicycle is Well-Maintained

Follow the inspection and maintenance guidelines. Check critical safety equipment before every ride.

Know the Law

Cyclists are required to follow the rules of the road. Additionally, some communities regulate the use of motorized vehicles with minimum age, requirements and necessary equipment. Check with your local police department for specific details.

Off-road Riding

Off-road riding is not recommended as the bicycle tires are for street-use only. Dust and extreme impacts from off-road riding can cause electrical system problems.

CARE & MAINTENANCE

Storage

- Avoid storing the bicycle in direct sunlight. Hot temperatures can cause damage to the battery and function of the bicycle.
- Avoid storing electric bicycle in wet conditions.
- When the bicycle is not being used, the battery can lose power. You should test the battery at least once a month, to ensure the battery maintains full charging capabilities.
- Avoid leaving the bicycle [and battery] idle for long periods of time, as this can cause battery failure.
- In winter, the batteries may lose power faster because of low temperatures.
- Inappropriate storage can shorten the life of the lithium battery life or cause other mechanical problems. Please store the electric bicycle indoors in a cool and dry place.

Cleaning

Before cleaning, make sure the bicycle is turned off, unplug the charging line and cover the charging port. During the cleaning process, be careful keep the water and moisture out of charging port. Use a dry cloth or a damp cloth to clean the cables – do not spray water on the bicycle or battery. During the cleaning process, be careful to keep water out of the charging port. Do not immerse the electric bicycle in water as it will cause permanent damage.

Battery Recycling

Help keep the environment free of litter and harmful pollution by recycling the battery correctly – do not throw batteries in the trash – please recycle your battery responsibly. Please consult your local sanitation department guidelines for safe disposal of batteries and parts.

Tire Maintenance

Make sure the pressure of the two tires inflated correctly – do not overinflate tires and try to keep the two tires at the same pressure. The default tire pressure both tires is 5–30/PSI. It is recommended that any flat tires be changed by an experienced bicycle shop mechanic.

JupiterBike

www.jupiterbike.com



Made in China

JupiterBike



support.jupiterbike.com